

YOUR PERSONAL L.SP3 SOLUTION








- Log in | Registration
- Start: your fastening application
- L.SP3 access | inline | straight | angle
- L.SP3 touch
- L.SP3 connect
- L.SP3 angle
- Tool selection | Service | Your configuration result



- Log in | Registration
- Start: your fastening application
- L.SP3 access | inline | straight | angle
- L.SP3 touch
- L.SP3 connect
- L.SP3 angle
- Tool selection | Service | Your configuration result



## CONFIGURATOR ACCESS VIA LÜBBERING WEBSITE

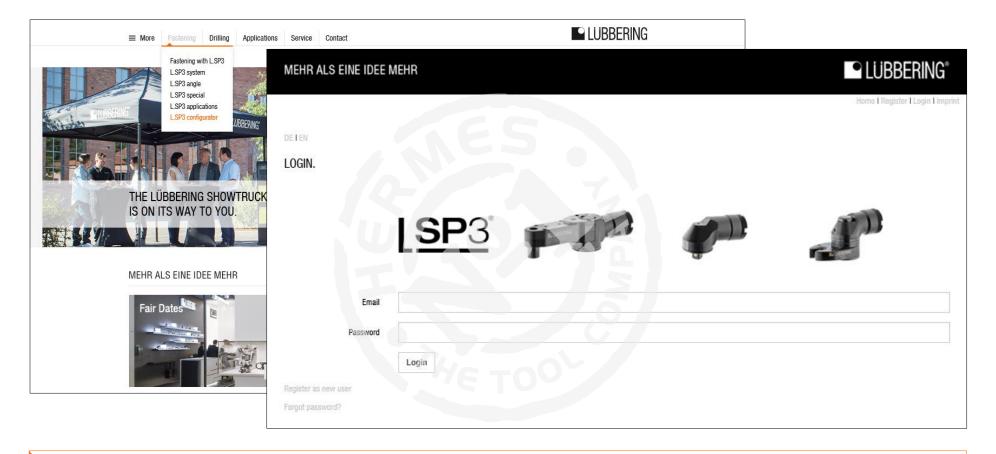

Register quickly and easily on our website: www.luebbering.de/configurator






- Log in | Registration
- Start: your fastening application
- L.SP3 access | inline | straight | angle
- L.SP3 touch
- L.SP3 connect
- L.SP3 angle
- Tool selection | Service | Your configuration result



# START WITH SELECTION OF YOUR FASTENING APPLICATION (1/2)

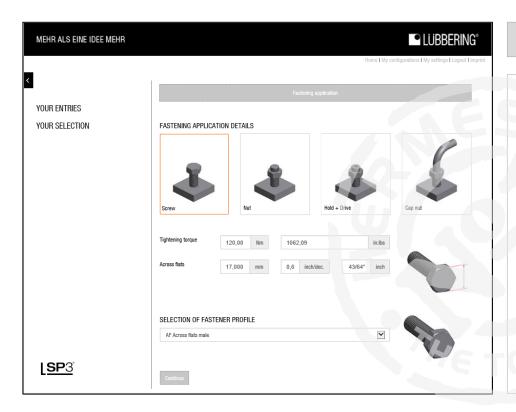

#### **CONFIGURATION START**

- Start your fastening application.
- Depending on the fastening selection, additional entry fields will appear if necessary.
- You will get an illustration for explanation on the right by clicking in an entry field (cf. width across flats).
- For an easier selection, all output socket gear profiles are displayed visually.



# START WITH SELECTION OF YOUR FASTENING APPLICATION (2/2)






- Log in | Registration
- Start: your fastening application
- L.SP3 access | inline | straight | angle
- L.SP3 touch
- L.SP3 connect
- L.SP3 angle
- Tool selection | Service | Your configuration result



## L.SP3 ACCESS | SELECTION OF THE MODEL

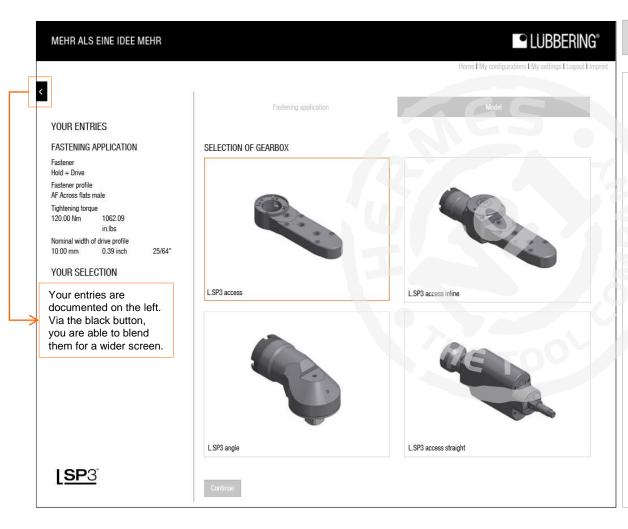


#### FOUR DIFFERENT MODELS

- Standard model of a geared offset head (with angle head):
  - L.SP3 access
- Straight-line geared offset head:
  - L.SP3 access inline
- Individual angle head:
  - L.SP3 angle
- Axial geared offset head
  - L.SP3 access straight
  - only applicable when Hold+Drive has been selected beforehand.
- If the fastening application "cap nut" (pipeline) has been selected, only open geared offset heads will be displayed.



### L.SP3 ACCESS – DETAILS ON YOUR OUTPUT SOCKET GEAR

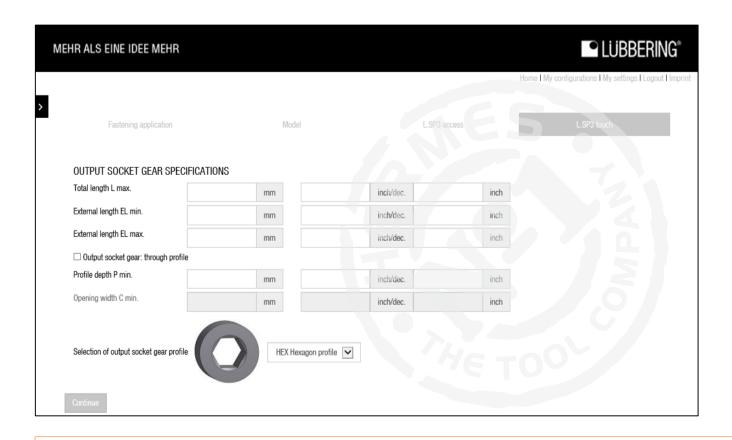



#### Very useful:

Automatic conversion in inch | A click in the entry field shows a drawing for explanation. If "fastening with nut / bit" has been selected, further details on the nut follow.




- Log in | Registration
- Start: your fastening application
- L.SP3 access | inline | straight | angle
- L.SP3 touch
- L.SP3 connect
- L.SP3 angle
- Tool selection | Service | Your configuration result





## DETAILS ON YOUR GEARED OFFSET HEAD | L.SP3 TOUCH

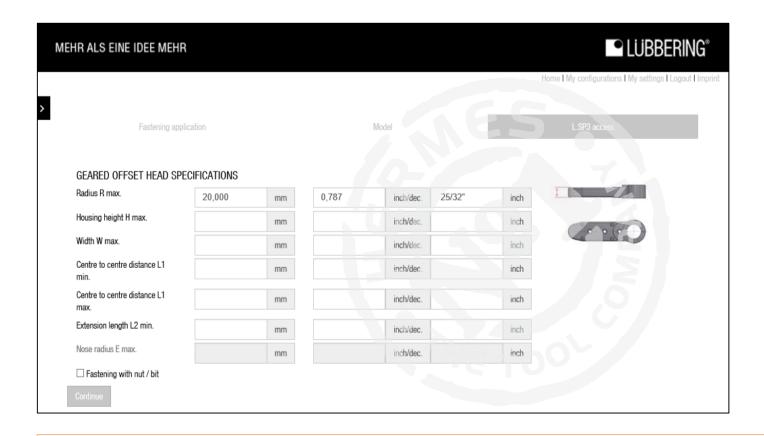




By entering your specifications a picture is shown.



#### SELECTION OF GEARED OFFSET HEAD & OUTPUT SOCKET GEAR

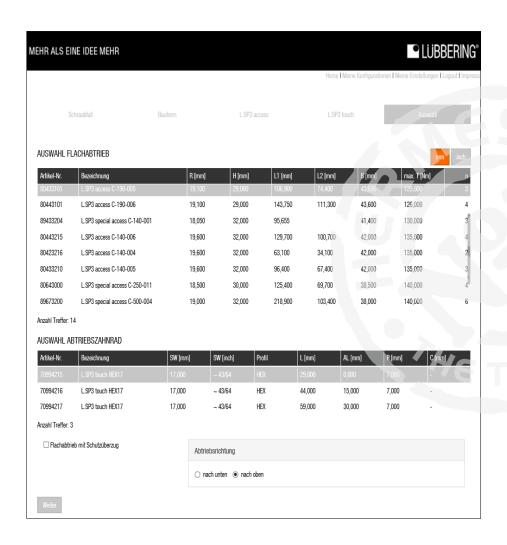

#### **SELECTION**


- Best match: marked in grey
  - · Presorting of the geared offset head:
    - 1. lowest output torque comes first
  - · Presorting of the output socket gear:
    - 1. Nominal width output profile
    - 2. Output profile (A/F and profile)
    - 3. Length (EL= 0 comes first);
    - 4. Opening width
- Sorting with click on the column heading
- Can be shown in mm or inch
- By moving the mouse cursor over the column headings an explaining picture is shown
- If your desired article is not available yet, a P-article is shown in grey. Moreover, you receive adjacent suggestions and can choose an alternative article.



- Log in | Registration
- Start: your fastening application
- L.SP3 access | inline | straight | angle
- L.SP3 touch
- L.SP3 connect
- L.SP3 angle
- Tool selection | Service | Your configuration result



## ZUBEHÖRAUSWAHL ZWISCHEN FLACHABTRIEB & WINKELKOPF

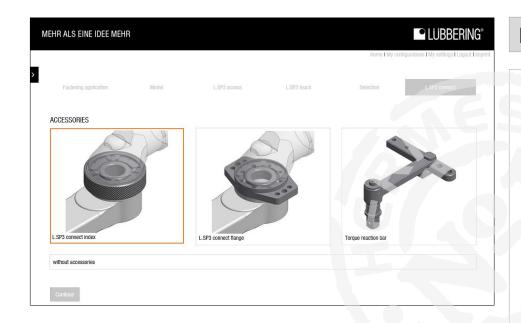

## L.SP3 CONNECT


- Select:
  - L.SP3 connect index for a turn of the angle head by 360°
  - L.SP3 connect flange to attach further accessories
  - Torque reaction bar



- Log in | Registration
- Start: your fastening application
- L.SP3 access | inline | straight | angle
- L.SP3 touch
- L.SP3 connect
- L.SP3 angle
- Tool selection | Service | Your configuration result



### ANGLE HEAD SELECTION

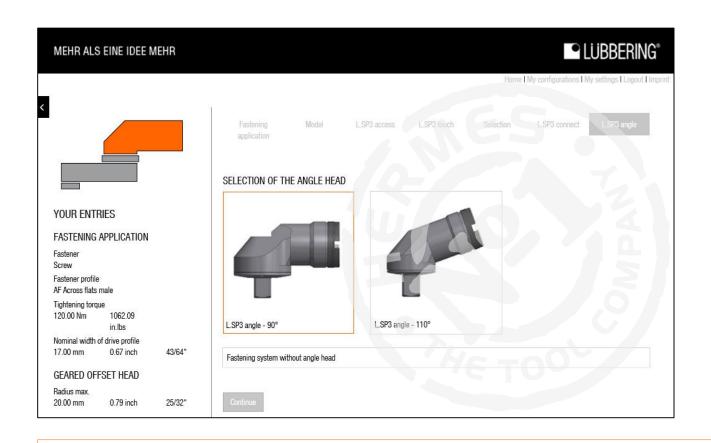



Select a LÜBBERING angle head L.SP3 angle in 90° or 110° and no adapter is needed.






- Log in | Registration
- Start: your fastening application
- L.SP3 access | inline | straight | angle
- L.SP3 touch
- L.SP3 connect
- L.SP3 angle
- Tool selection | Service | Your configuration result



### **TOOL SELECTION**

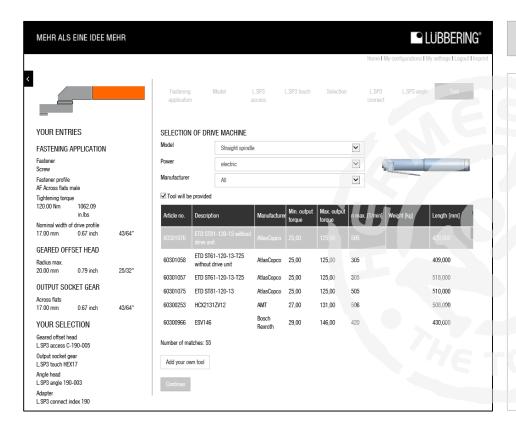

## **TOOL SELECTION**

- Selectable:
  - Model
  - Energy
  - Tool manufacturer
- If you already have a tool and you find it in the given table, please pick "tool provision".



### **SELECTION OF SERVICES**



## LÜBBERING SERVICES

- Machine capability analysis
- Running-in with LÜBBERING certificate
- Choose the direction of rotation
- Select "tool assembly" and we assemble the selected tool to the fastening system.
- Tailor-made description: enter your text for your fastening system here.



## YOUR CONFIGURATION RESULT AT A GLANCE



#### YOUR L.SP3 SOLUTION

- Clear overview
- A drawing of your configured system can be shown directly
- PDF document with:
  - article-no., drawings, technical data
- Save configurations in your own account and call them up at any time
- Decide on your own when your configuration is ready.



### YOUR ADVANTAGES AT A GLANCE

- Entire fastening system configurable:
  from socket gears to drive units from all major tool manufacturers
- Available online on mobile devices
- Own login account
- Save configurations and call them up at any time
- Send requests directly from the configurator
- Easy handling



Johannes Lübbering GmbH Industriestraße 4 33442 Herzebrock-Clarholz | Germany

Fon: +49 (52 45) 83 09 - 0 Fax: +49 (52 45) 83 09 - 250



# Kompania Narzędziowa "HERMES" Sp. z o.o. ul. Sarni Stok 73 a, 43-300 Bielsko-Biała, Polska; tel: +48 33 821 41 90-91

e-mail: biuro@hermestools.eu www.hermestools.eu