

NEW FEATURE

Wireless Communication Setup through mPro250

New software release 2.4.0 allows configuration of wireless settings directly on controller.
This eliminates the need for RF Configurator software!

1. A USB A to USB micro connector cable will need to be connected to the front USB port of the mPro250 and to the USB micro connector of the cordless tool.



CellClutch



CellCore




CellTek



2. Select the Navigator





3. Select Utilities

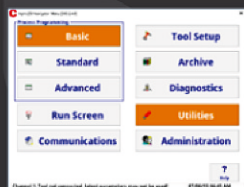

4. Select the System Settings tab and the Cordless Tools button



5. Select the IRDA/USB Serial selection. When the connection is made, fill in the WLAN information boxes and select the Advanced settings button for additional settings.

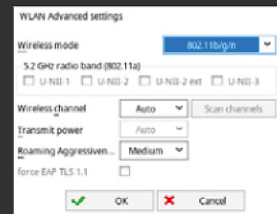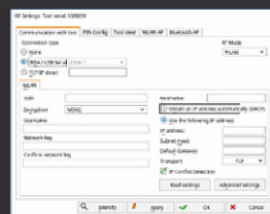

6. When completed with the WLAN Advanced settings press OK button and then select the Apply button to write to the cordless tool.